






Measurements required to order a Bay Window

Internal Windows Sizes with back span and projection


Or

Angles and facet sizes

Height is always needed including cill

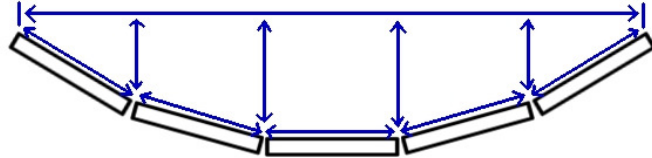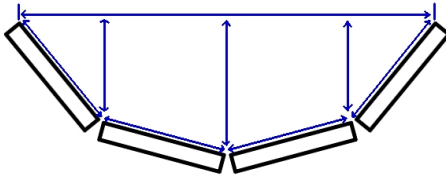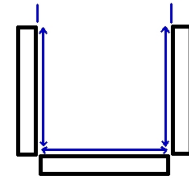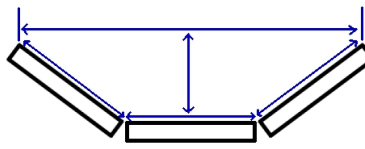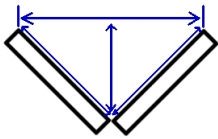

Example

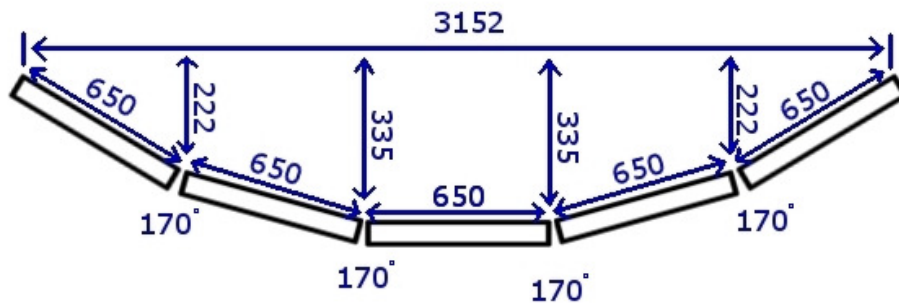

The use of an angle finder is highly recommended.